

**IMPORTANT:** Read all instructions before assembly and use of this product. Keep instructions for future reference. Recommended for children 6 months to 5 years (or 40 lbs.). Adult assembly required. Keep small parts away from children.

## ⚠️ WARNING

**FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.**

- Read and follow instructions before assembly and use. If you do not have instructions, DO NOT use this product. Call **1-888-999-HALO** or visit **www.Halosleep.com**.
- Before installation, inspect the SnoozyPod for damaged hardware, loose or missing components or sharp edges.
- DO NOT use the SnoozyPod if parts are missing or broken. Contact or write Halo Innovations for replacement parts and instructional literature if needed. DO NOT substitute parts.
- ALWAYS place the unit on a flat surface in an upright position.
- This product is NOT a toy. DO NOT allow children to play with it.
- This product contains small parts. Adult assembly required. Exercise care when unpacking and assembling the product and keep small parts away from children.



## STRANGULATION HAZARD

Children have STRANGLED in cords. Keep power cords out of the reach of children (more than 3 feet [0.9 meter] away). NEVER leave a cord positioned where a child could reach it. DO NOT use unit near water (such as bath tub, sink, etc.).

## SUFFOCATION HAZARD - INFANTS HAVE SUFFOCATED

- To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.
- Never use plastic shipping bags or other plastic film as a mattress cover not sold or intended for that purpose. They can cause suffocation.
- Discard all plastic packing materials immediately after opening.

## BATTERY SAFETY INFORMATION (BATTERIES NOT INCLUDED)

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: Alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

## IMPORTANT SAFETY INSTRUCTIONS

- Heed all warnings - All warnings on the product and in the operating instructions should be adhered to.
- Follow all instructions - All operating and use instructions should be followed.
- Water and moisture - DO NOT use this apparatus near water. For example, near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet environment or near a swimming pool and the like. Care should be taken so that objects DO NOT fall onto unit and that liquids are not spilled onto unit.
- Cleaning - Disconnect all units before cleaning. DO NOT immerse in water. Clean only with dry cloth.
- Servicing - DO NOT attempt to service this product yourself as opening or removing covers (except battery doors) may expose you to hazards.
- Replacement parts - When replacement parts are required, be sure the replacement parts specified by the manufacturer have the same characteristic as the original part. Unauthorized substitution may result in fire, electric shock or other hazards.
- Usage - Use this appliance ONLY for its intended use as described in this manual.
- Object and Liquid Entry - NEVER push objects of any kind into this product through casing slots as they may short out parts that could result in a risk of fire or electric shock. NEVER spill liquid of any kind on the product.
- Power cord protection - Protect the cord from being walked on or pinched by furniture or other items. Power cord should be routed through the cord protectors (provided).

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HALO® is under license. Made in Huizhou, Guangdong, China. Contains FCC ID: WAP4008 IC: 7922A-4008

**HALO**  
**SNOOZYpod**  
Vibrating Bedtime Soother



Scan here to view assembly video or visit  
[www.YouTube.com/HaloSleepSack](http://www.YouTube.com/HaloSleepSack)

## WARNING: STRANGULATION HAZARD

- Never allow cord to touch outside wall of mattress where it could be accessed by infants or toddlers.
- Remove all slack from SnoozyPod cord.
- When lowering the mattress support as your child grows, eliminate any additional slack in the cord.
- Always use provided cord protectors as indicated below and secure cord around crib leg with provided zip tie.



**WARNING: SNOOZYPOD CONTROL PANEL IS DESIGNED TO BE POSITIONED OUTSIDE CRIB OR BED RAILS. ONLY USE SNOOZYPOD IN CRIBS, TODDLER OR TWIN BEDS.**


**ASSEMBLY INSTRUCTIONS:** For FAQ visit [www.halosleep.com](http://www.halosleep.com).

**WHAT YOU WILL NEED (NOT INCLUDED):** Battery operation - 4 AA Alkaline Batteries, Phillips Head Screwdriver to open battery compartment

**INCLUDED:** SnoozyPod base, SnoozyPod control panel, power cord, 2 cord protectors, 1 zip tie, quick setup instructions, registration card





**STOP: Use caution when opening SnoozyPod packaging. Do not pull on wires when removing SnoozyPod from package.**

1. SnoozyPod control panel and SnoozyPod base are attached. Carefully remove both SnoozyPod components together from packaging. Do not pull on wires.
2. Before assembling SnoozyPod, gently tuck any excess wiring into the neck of the control panel so it does not interfere with the latching mechanism. Insert SnoozyPod control panel into base until you hear a click.
3. Rotate SnoozyPod and slide through the crib or bed slats, keeping the control panel outside the crib.
4. Plug power cord into neck of SnoozyPod and thread the cord along the underside of SnoozyPod. Cord should exit through the groove.

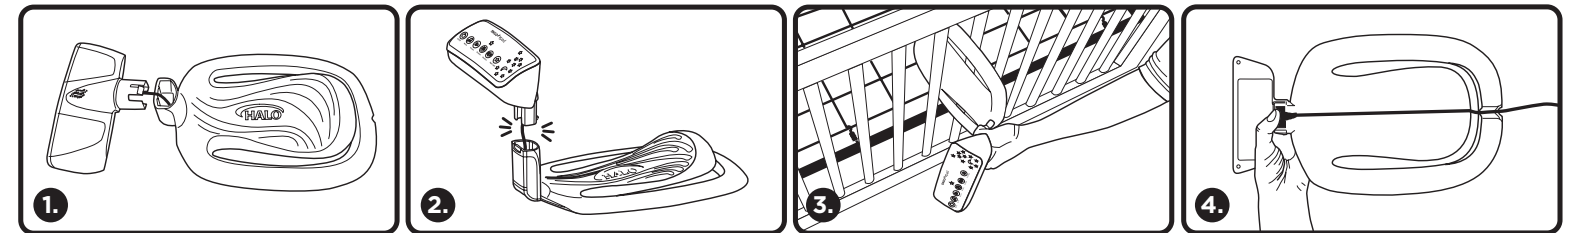

**To secure cords out of reach of children (spring or slat cribs and beds):**

5. Thread cord down through middle of mattress support.
6. Guide cord and cord protector along floor to crib or bed leg. Cord should be taut.
7. Wrap cord at least 3 times around crib leg. Thread zip tie through holes in both tubes (A, B, C, D) and secure tubes snugly to crib leg.
8. Plug power cord into wall outlet.

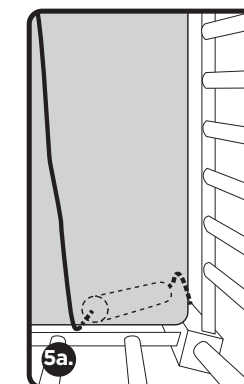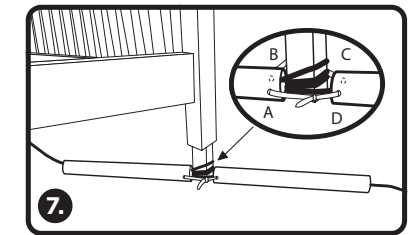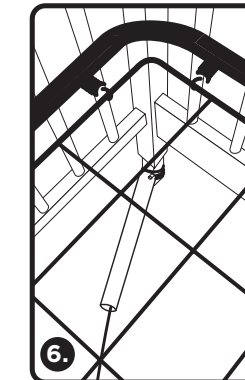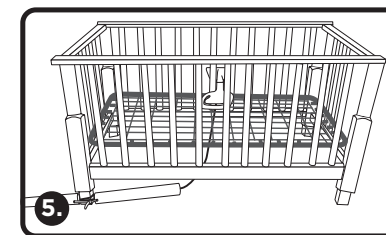

**To secure cords out of the reach of children (platform beds):**

- 5a. Guide cord over platform. Cord should exit crib or bed at the head or foot.
- 6a. Guide cord and cord protector along crib or bed leg. Cord should be taut.
7. Wrap cord at least 3 times around crib leg. Thread zip tie through holes in both tubes (A, B, C, D) and secure tubes snugly to crib leg.
8. Plug power cord into wall outlet.

**IMPORTANT:** For spring and slat cribs and beds, cord should be threaded through the SnoozyPod and should exit in the middle of the mattress support. Do not allow cord to exit at the side of the bed, where it could be reached by a child.

**TO PAIR YOUR SNOOZYPOD WITH BLUETOOTH:**

The SnoozyPod app can be downloaded onto your smartphone for free from the Apple App Store or from Google Play. The SnoozyPod app is compatible with both Apple and Android smartphones. **Note:** the SnoozyPod app is not available on tablets.

1. Make sure you have Bluetooth® enabled on your smartphone. **Tip:** The Bluetooth feature is usually found in the Settings menu.
2. Go to the Apple App Store or Google Play and search for “SnoozyPod”. Download the free app.
3. Follow the instructions in the app to operate the unit and set parental lock function if desired. For best Bluetooth® performance, use your mobile device within 33 ft. (10 m) of the SnoozyPod. Keep other wireless equipment at least 3 ft. (1 m) away from SnoozyPod.

**TO OPERATE SNOOZYPOD FROM THE CONTROL PANEL:**

The SnoozyPod will automatically power on when plugged in. If you need to power on or off, press and hold the On/Off button.

**Soothing Sounds:** There are four soothing sounds (heartbeat, white noise, soothing stream, and rainforest). There are two volume settings: low and high. There are two duration settings: 30 minutes and continuous. To activate soothing sounds, press the Soothing Sounds button to activate the heartbeat sound. Press again for white noise. Press a third time for soothing stream. Press a fourth time for rainforest. Press a fifth time to turn off all sounds.

**To adjust duration of soothing sounds:** press Continuous Sound button. The star above the Continuous Sound button will glow green. Sound will play until you turn it off. All other soothing functions will power off after 30 minutes.

**Note:** when operating on battery power only, the Continuous Sound function is disabled. Sounds will automatically power off after 30 minutes. You may extend sounds for an additional 30 minutes by pressing the Continuous Sound button once.

**To adjust volume of soothing sounds:** Press volume button once for low volume. Press again for high volume. Press a third time to turn off sounds.

**To activate vibration:** Press Vibration button once to activate gentle vibration. Press again for stronger vibration. Press a third time to turn off vibration. Vibration will automatically power off after 30 minutes. **Note:** vibration can be set to run continuously from the app. Please see **TO OPERATE SNOOZYPOD FROM THE APP.**

 

 

 



**To activate nightlight:** Press the Night Light button to turn on a soft, amber glow, LED Night Light. Press a second time for brighter light. The Night Light will automatically power off after 30 minutes.

**Notes for General Use:**

The SnoozyPod will automatically go into power save mode after 30 minutes. To reawaken SnoozyPod from power save mode, press and hold the On/Off button. If you want sounds to play all night long, press the Continuous Sound button. If Continuous Sound is activated, sound will play until you turn it off.

After 30 seconds without a press, the display button lights will turn off. Press any button to reawaken SnoozyPod. Then press desired button to activate that function.

The unit can still be operated via Bluetooth when in power saving mode.

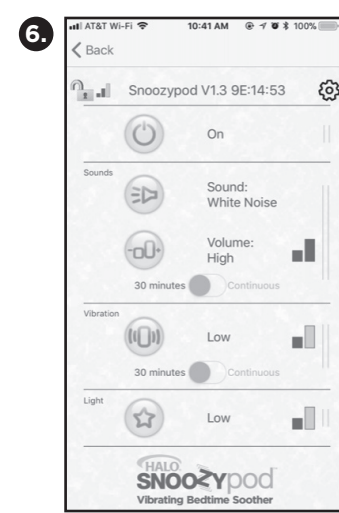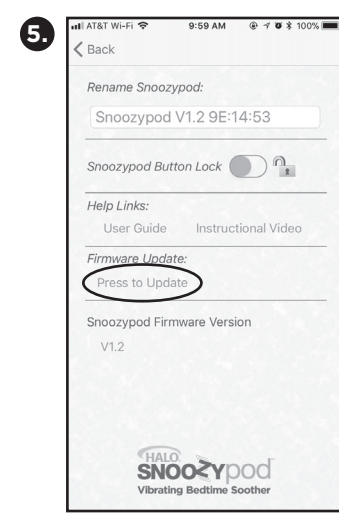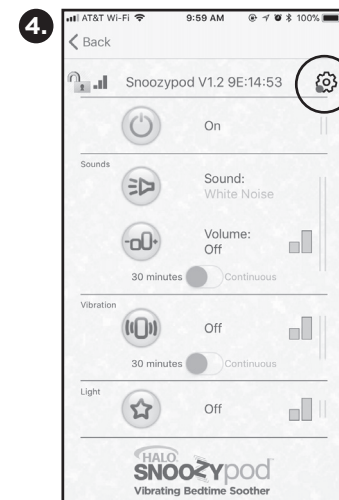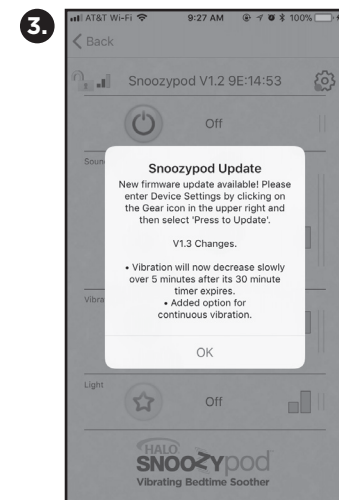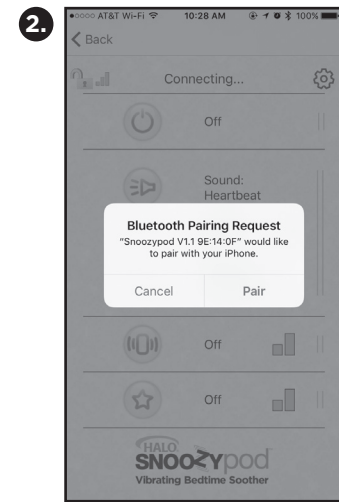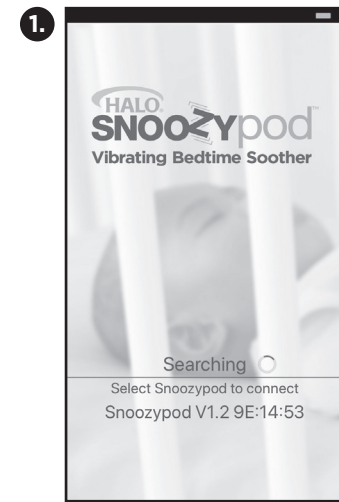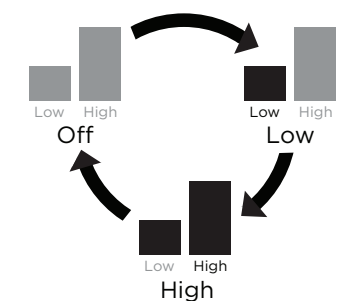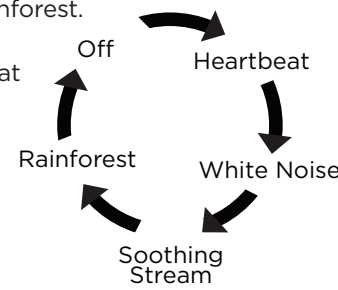

**TO OPERATE SNOOZYPOD FROM THE APP:**  
1. Open app. Your SnoozyPod should be listed beneath the Search bar. Select your SnoozyPod to activate.

2. When prompted, press “Pair”

3. If an update is available, a notification will pop up describing the update. Press OK.

4. A blue dot will appear over the lower left corner of the gear icon if an update is available. Select the gear icon to download the update.

5. Press to update firmware. Follow prompts to start update. This will send an update to the SnoozyPod. The green star icon on the control panel may flash while the update is loading.

6. **To activate soothing sounds:** press the Soothing Sounds button to activate the heartbeat sound. Press again for white noise. Press a third time for soothing stream. Press a fourth time for rainforest. Press a fifth time to turn off all sounds.

**To adjust the volume of soothing sounds:** press the volume button once for low volume. Press again for high volume. Press a third time to turn off sounds.

**To adjust duration of soothing sounds:** press the toggle switch to choose 30-minute or continuous sounds. In the continuous setting, soothing sounds will play until you turn them off.

**To activate vibration:** press Vibration button once to activate gentle vibration. Press again for stronger vibration. Press a third time to turn off vibration. Vibration will automatically power off after 30 minutes.

**To adjust duration of vibration:** press the toggle switch to choose 30 minute or continuous vibration. In the continuous setting, vibration will run until you turn it off.

**To activate nightlight:** Press the Night Light button to turn on a soft, amber glow, LED Night Light. Press a second time for brighter light. The Night Light will automatically power off after 30 minutes.